

Griff Service Check List

Location	Description	Action	Spare Part P/n	6 months	12 Months	18 Months	24 Months
1	Pump	Inspect pump for an visual leaks or corrosion		X	X	X	X
2	Flow switch housing	Check flow switch is free to move in housing		X	X	X	X
3	Duo Block	Remove and clean out all ports of block			X		X
3,1	Selector switch Axel	Inspect O-rings/ Replace O-rings		X	X	X	X
3,2	Injectors	Clean with 2mm drill bit			X		X
3,3	Air non return valve	Disassemble, inspect/ replace O-ring	110003155	X		X	
		Replace complete NRV	110003096		X		X
3,4	Chemical Non return valve	Disassemble, inspect/ replace O-ring	110003155	X		X	
		Replace complete NRV	110002522		X		X
3,5	Water Non return Valve	Inspect/ replace if required		X	X	X	X
4	Quick Coupling O-rings	Replace	641100		X		X
5	Chemical hoses	Replace chemical hoses			X		X
		Inspect/ replace		X		X	
6	Chemical limiting nozzles	Replace	614213		X		X
		Inspect/ replace		X		X	
7	Power lead and plug	Check condition of power lead and plug for cuts or damage, replace as required		X	X	X	X
8	Compressor relief valve	Check no air or water is leaking from valve		X	X	X	X
9	Compressor micro switch	Check operation of micro-switch ensuring compressor turns on/off, adjust if required		X	X	X	X
10	Flow switch	Check operation of flow switch ensuring pump turns on/off, adjust if required		X	X	X	X

Indicates Part of kit

